


# TOPPER INSTALLATION



1. Make sure your headset star nut (or other headset preload device) sits straight in your steerer tube.



2. Apply Anti Seize paste or assembly grease on thread and head contact face.

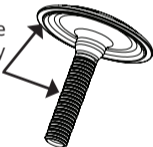

3. Adjust headset play/preload according to headset and stem manufacturer's specifications.